



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200
Fax 613 632-5246

D206-642-241
Job Sheet 191323



Part No: D206-642-241

Job Qty: 1 ea

Part Name: Replacement Skidtube, High Gear with Standard Wearplates Fits LH or RH



Part Weight: 0 lbs

Status: New

Priority: Medium

Job Created: 2/27/19

Job Tracking No:

Due Date: 3/15/19

Created By: Marie Lajeunesse

Type: Stock

Description:

Note: DWG REV F(DEO) IPP Rev: 04.12.02 Revised procedural steps KJ/JLM IPP RevP: revise and update route/bom DD 10.01.06 ver: EC IPP rev Q 10.02.19 per PAR 09-043 EC verified by: DD IPP Rev: R 12.11.22 now swage per ecn12-679 DD ver: JLM IPP Rev: S 14.04.24 ECN14-520 DD ver: JLM

Ship Via:



Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL: 1 613 632-5200
Email: sales@dartaero.com
www.dartaerospace.com

als

Container No: S158840



Part: D206-642-241

Job No: 191323

Serial No/Batch: S158840

Revision:

Inspector:

Exp Date:

Instructions: FAA STC SA00475SE 18/10/17, TGA STC SH98-4 Issue 2, EASA STC

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup Hrs	Run Hrs	Workcenter / Supplier	Lead Time	
90	Start up Operation	1 Ea	3/15/19	3/15/19	0.00	0.00	Start Up Skidtubes-1		DD
110	Skidtubes	1 pcs	3/15/19	3/15/19	0.00	2.22	Skidtubes-2		DD BE MGA
120	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC5		DD 19-03-13
130	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC9		DD 19-03-13
140	HandFinish	1 pcs	3/15/19	3/15/19	0.00	0.33	HandFinish1		DR 19/03/14
150	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC7-1		BE
160	Skidtubes	1 pcs	3/15/19	3/15/19	0.00	2.50	Skidtubes-2		MGA
180	Skidtubes	1 pcs	3/15/19	3/15/19	0.00	2.50	Skidtubes-2		MGA
190	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC5		BE
200	Skidtubes	1 pcs	3/15/19	3/15/19	0.00	2.50	Skidtubes-2		BE DD
220	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC9		DD 19-04-05
230	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC5		DD 19-04-05
240	HandFinish	1 pcs	3/15/19	3/15/19	0.00	0.33	HandFinish2		DR 19/04/15
250	Powdercoat	1 pcs	3/15/19	3/15/19	0.00	0.28	Powdercoat1		DR 19-04-09
260	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC3		BE
270	HandFinish	1 pcs	3/15/19	3/15/19	0.00	1.06	HandFinish3		DR 19-04-12
300	QC	1 pcs	3/15/19	3/15/19	0.00	0.00	QC5		BE
305	DC	1 pcs	3/15/19	3/15/19	0.00	0.00	DC		BE
310	Packaging	1 pcs	3/15/19	3/15/19	0.00	0.00	Packaging3-1		
320	QC21-FG	1 Ea	3/15/19	3/15/19	0.00	0.00	QC21		

Part Op 110 - 1-Deburr Fwd edge of tube 2- Remove ridge on inside of Fwd edge of tube as per Dwg D2650 3-Weld Fwd Cap as per Dwg D2650. Use aluminum rod. Grind D2647 to fit as required. 4-Cut Aft end as per dwg D2650 from front of tube and Deburr 5-Remove inner indexing ridge on Aft end of skidtube as per Dwg D2650 7-Open holes for Aft end cap as per Dwg D2650 with #30 Drill Bit using DT8025. 8-Drill pilot holes using Dt 8167 12-Remove 3/16" cleco's only and open GHW holes to Ø0.500" as per Dwg D2650 14-Remove indexing edge using DT9779 as per Dwg D2650. Leave 0.070" wall minimum. 15-C'sink GHW rivet holes as per Dwg D2650 16-Open crossbolt holes to Ø0.3125" 17-Drill pilot holes using DT8028-3, then open to Ø0.297" as per Dwg D2650. Open Aft cap hole #6. 18- Ream crossbolt spacer holes to finished size as per Dwg D2650, D2650-3 Drilling Detail ***DO NOT OPEN X-BOLT SPACER HOLE OF DETAIL B*** 19-Deburr tube as per QSI 018 and blow out chips from inside the tube

160 - 1- Open and c'sink one crossbolt spacer holes as per Dwg D2650 (DEO Detail B)(without cutting fluid) 2-Deburr and blow out all chips from inside the tube

180 - 1-Locate, install and rivet doublers as per Dwg D2650. Micro-shave rivets as required 2-Bond D2654-3 web in place as per QSI 015. Ensure holes line up. Allow 12 Hrs. cure time before cutting

200 - 1-Remove alodine in one area per DEO detail B from around hole and prepare for welding 2-Prep per QSI 005 and Insert one D2649 crossbolt spacer. Weld as per QSI 004 and Dwg D2650. Remember to back drill each hole to 0.25" before welding the other side. Use aluminum rod. 3-Grind welds flush as per Dwg D2650. 4-Using DT8733, insert (2) D3286-3 spacers as per QSI 004 and Dwg D2650. Remember to back drill each hole to Ø0.402" before welding other side. Use SS rod as required. 5- Insert D4720-1 Spacer. Swage to 0.313" X 0.75" DP per QSI 002. Trim and grind flush per QSI 002 6- Install D2680-041 Nut Plate as per Dwg D2650

240 - Brush alodine tube on crossbolt spacer area, do not acid etch, do not dip tube in tank.

250 - Make sure Nut Plate Thread is protected using paint screw, and mask GHW studs. START TIME: 1:30

FINISH TIME: 2:00 01:30 M 151749

270 - 1- Install inserts & wearpads as per dwg D2922. Use a drop of Sikaflex inside insert holes before installing wearpad/wearplate.

305 - Photocopy bluefile & type labels per PPP D206-642-241 CHG007

310 - Identify and pack for shipping as per PPP D206-642-241

Sika Flex 19/04

wing walk S163430

Job BOM

Part / Item	Component Name	Quantity	Operation	Container
D2620	Skidtube, 206 Skidtube	1 pcs (1 ea)	90-Start up Operation	5150650
D2647	Cap	1 pcs (1 ea)	90-Start up Operation	5089985
D3286-1	Doubler	2 pcs (2 ea)	90-Start up Operation	5164714
CCR264SS3-3	Cherry Rivet	2 Ea (2 ea)	180-Skidtubes	FM137622
CR3212-4-03	Cherry Rivet	2 Ea (2 ea)	180-Skidtubes	FM137886-0
CR3212-4-04	Cherry Rivet	52 Ea (52 ea)	180-Skidtubes	5150213x13 3045671x42
D2654-3	Web	1 pcs (1 ea)	180-Skidtubes	5054085
D2649	Cross Bolt Spacer	1 pcs (1 ea)	200-Skidtubes	5156881
D3286-3	Spacer	2 pcs (2 ea)	200-Skidtubes	5140137
D4720-1	Spacer	17 pcs (17 ea)	200-Skidtubes	5154519
ALS4-1032-130	Rivnut	44 Ea (44 ea)	270-HandFinish	5007279
D2646	Aft Cap	1 pcs (1 ea)	270-HandFinish	5160607
D2651-1	Plug	18 pcs (18 ea)	270-HandFinish	5044163
D2651-3	O-Ring	18 pcs (18 ea)	270-HandFinish	5027453
D2680-041	Nut Plate	1 pcs (1 ea)	270-HandFinish	5158428
D3537-1	Wearpad	4 pcs (4 ea)	270-HandFinish	5171270
D3537-3	Wearpad	1 pcs (1 ea)	270-HandFinish	5013552
D4956-13	Wearplate Fwd	1 pcs (1 ea)	270-HandFinish	5031901
D4956-21	Wearplate Center	1 pcs (1 ea)	270-HandFinish	5077507
D4956-33	Wearplate Aft	1 pcs (1 ea)	270-HandFinish	5077515
MS27039-1-08	Screw	46 Ea (46 ea)	270-HandFinish	65104017 180x5153202-1
MS27039-4-06	Screw	1 Ea (1 ea)	270-HandFinish	FM137951-1
NAS1149D0332J	Washer	46 Ea (46 ea)	270-HandFinish	5123446
NAS1149D0463J	Washer	1 Ea (1 ea)	270-HandFinish	5055952
				M.U. 009182.

Job Allocations

Operation	Component Part	Required	Inventory	Allocated
90-Start up Operation	D2620	1	11	0
	D2647	1	12	0
	D3286-1	2	20	0
180-Skidtubes	CCR264SS3-3	2	251	0
	CR3212-4-03	2	126	0
	CR3212-4-04	52	568	0
200-Skidtubes	D2654-3	1	6	0
	D2649	1	170	0
	D3286-3	2	20	0
270-HandFinish	D4720-1	17	415	0
	ALS4-1032-130	44	9,354	0
	D2646	1	17	0
	D2651-1	18	129	0
	D2651-3	18	398	0
	D2680-041	1	30	0
	D3537-1	4	45	0
	D3537-3	1	22	0
	D4956-13	1	7	0
	D4956-21	1	6	0
	D4956-33	1	8	0
	MS27039-1-08	46	399	0
	MS27039-4-06	1	17	0
	NAS1149D0332J	46	3,169	0
	NAS1149D0463J	1	3,158	0

Part Specifications

Specifications could not be found.

Plex 2/27/19 8:57 AM Dart.lajeunesse.marie

QTY -1	QTY -3	QTY -5	QTY -7	PART NUMBER	DESCRIPTION
X				D2650-1	SKIDTUBE ASSEMBLY
	X			D2650-3	SKIDTUBE ASSEMBLY
		X		D2650-5	SKIDTUBE ASSEMBLY
			X	D2650-7	SKIDTUBE ASSEMBLY
1	1	1	1	D2600-1-160	EXTRUSION
1				D2654-1	WEB
	1			D2654-3	WEB
		1		D2654-5	WEB
			1	D2654-7	WEB
1	1	1	1	D2646	AFT CAP
1	1	1	1	D2647	CAP
17	18	19	23	D2649	CROSS BOLT SPACER
16	18	14	22	D2651-1	PLUG
16	18	14	22	D2651-3	O-RING
1	1	1	1	D2680-041	NUT PLATE
2	2			D3286-1	DOUBLER
2	2			D3286-3	STUD
42	44	54	60	ALS7-1032-130	INSERT (or AKS4-1032-130, ALS4-1032-130, ALS7-1032-130)
2	2	2	2	AN960JD10L	WASHER
2	2	2	2	CCR264SS3-3	RIVET
2	2	2	2	CR3212-4-03	RIVET
2	2	2	2	MS27039-1-08	SCREW
1	1	1	1	MS27039-4-06	SCREW
1	1	1	1	AN960JD416	WASHER
52	52			CR3212-4-04	RIVET

F



NOTES:


- 1) MATERIAL: N/A
- 2) FINISH: -CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
-POWDER COAT WHITE (4.3.5.1) PER DART QSI 005 4.3
-BLACK ANTI-SKID PAINT AS INDICATED TO 0.5 ABOVE LOCATION RIDGE PER DART QSI 005 4.4
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 6) IDENTIFICATION: NONE
- 7) WEIGHT: N/A
- 8) WELD PER DART QSI 004
- 9) DAMAGE TOLERANCE ON FWD BEND:
THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 5 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020 DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.
- 10) BOND WEB INTO OUTER TUBE WITH SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015
- 11) INSERT D2651-1 PLUG C/W D2651-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE)
- 12) DRILL Ø0.297 FOR ALS7-1032-130 INSERTS USING TEMPLATE DT8056-1 ON -1 TUBE, DT8056-3 ON -3 TUBE, DT8056-5 ON -5 TUBE, AND DT8056-7 ON -7 TUBE. INSTALL INSERTS AFTER FINISH.
- 13) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 191323 MW
1902-27


DEO ATTACHED

RELEASED
08.08.08

F	DRAWING UPDATED TO CURRENT STANDARDS. SHT 6 ADDED. ALL SECTION AND DETAIL VIEWS TRANSFERRED TO SHT 6. SHT 1 IN PL PART D2649 QTY UPDATED. SHT 6 SECT C-C GRIND INSTRUCTIONS DELETED FROM NOTE 7 (SEE NCR 239).	AJS	08.08.08
E	RMOVE CBORE, CHG DRILL, ADD CHAMFER	CP	06.03.30
D	REDRAW; INCCRP. DE09136/9153/9163 MOD GROUND HANDLING ON D2650-1/-3	CP	04.05.17
C	CHANGE HOLE PATTERN AND FRONT END	DS	97.10.29
B	AS MANUFACTURED CHANGES	DS	97.06.26
A	NEW ISSUE	DS	97.03.25
REV.	DESCRIPTION	BY	DATE
DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 1 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

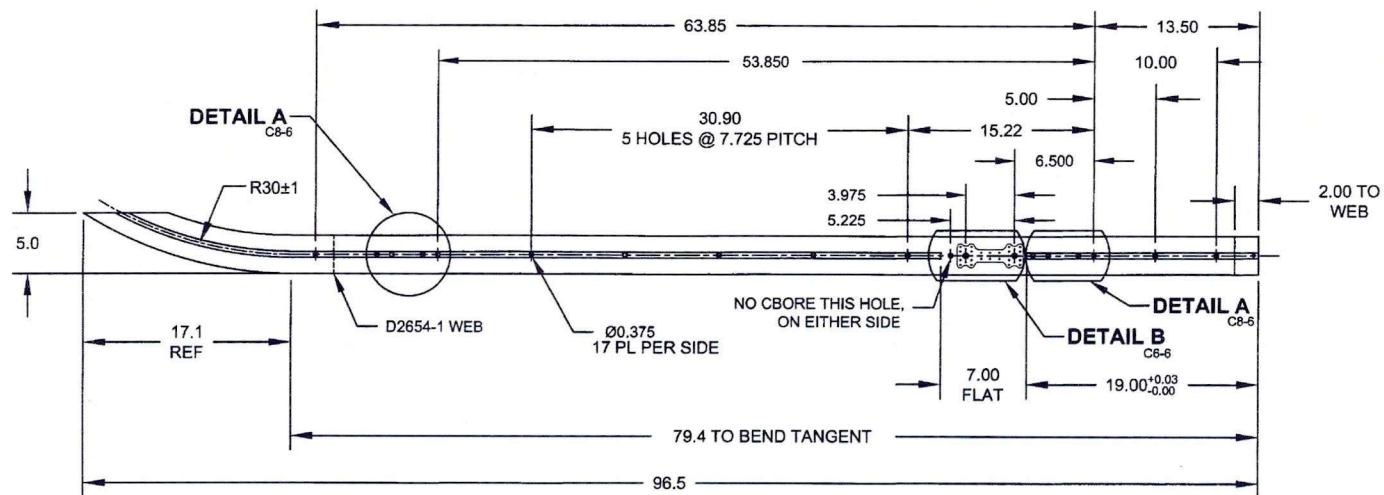


D2650-1 BENDING/DRILLING DETAIL

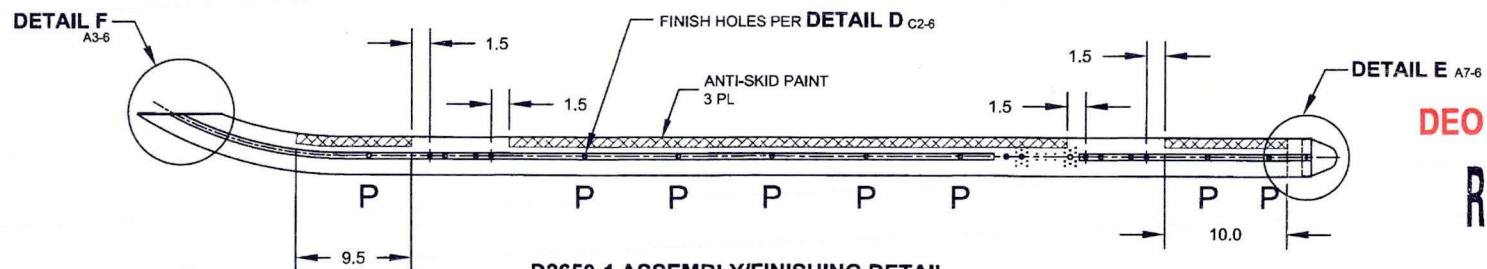


D2650-1 ASSEMBLY/FINISHING DETAIL

DEO ATTACHED
RELEASED
680922/114

DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 2 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

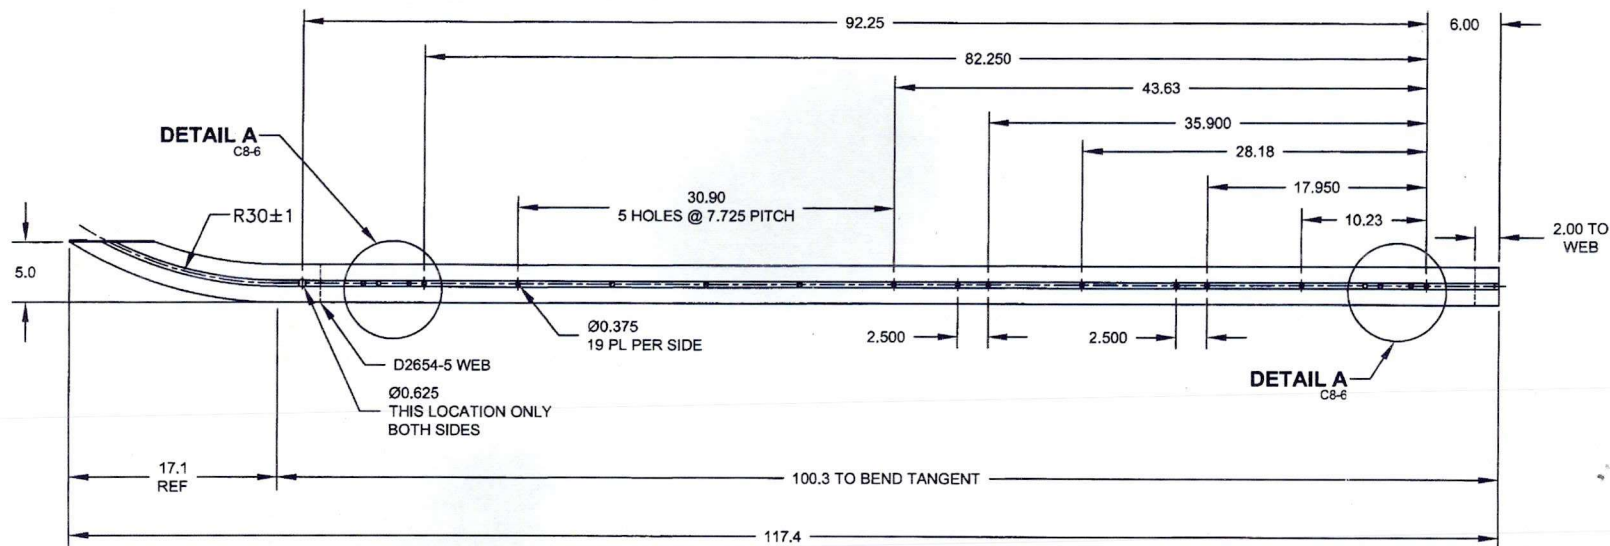

D2650-5 BENDING/DRILLING DETAIL

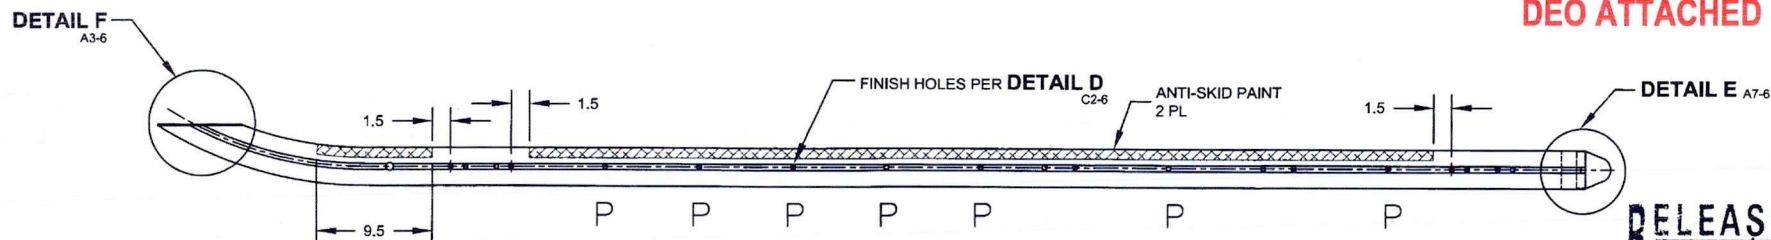


D2650-5 ASSEMBLY/FINISHING DETAIL

DEO ATTACHED

RELEASED
08-09-2017


DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 4 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

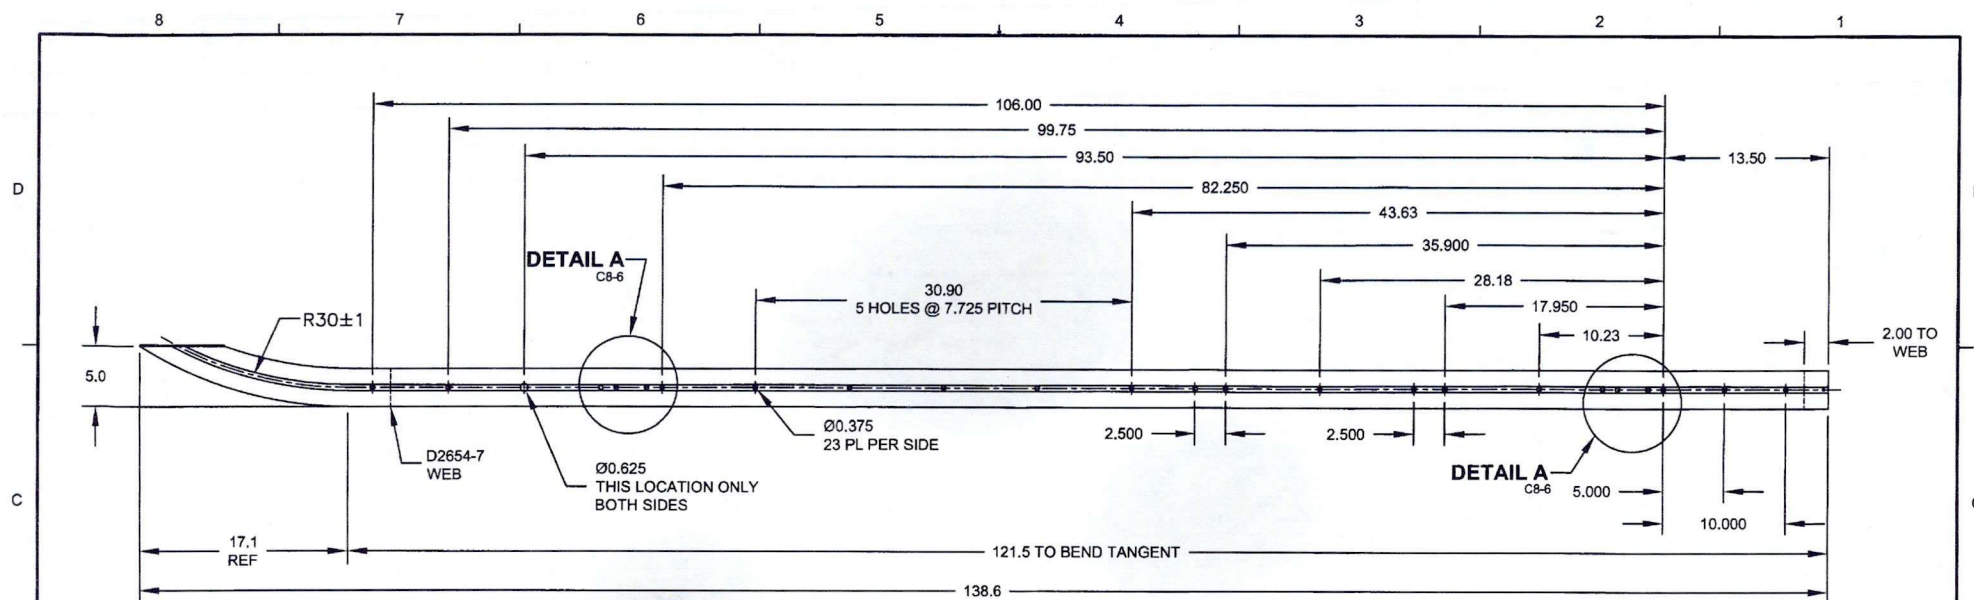

D2650-7 BENDING/DRILL DETAIL


DEO ATTACHED

RELEASE
04 07 22 1111

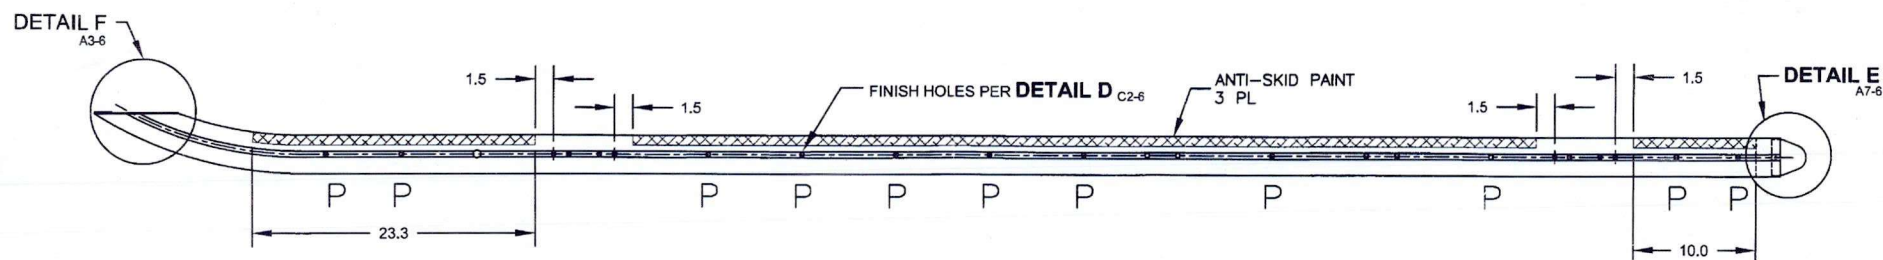


D2650-7 ASSEMBLY/FINISHING DETAIL

DESIGN	DS	DART AEROSPACE USA, INC. PORT HADLOCK, WA	
DRAWN	AJS		
CHECKED	J	DRAWING NO.	REV. F
MFG. APPR.	E	D2650	SHEET 5 OF 6
APPROVED	AP	TITLE	SCALE
DE APPR.	H	206/407 SKIDTUBE ASSEMBLIES	NT
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUBJECT TO THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE, INC.	

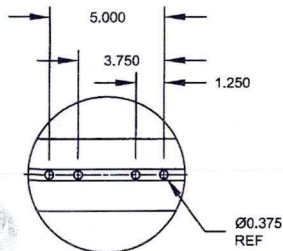

DETAIL A
SCALE 2X

C2-2
D7-2
C2-3
D7-3
C2-4
D7-4
C2-5
D6-5

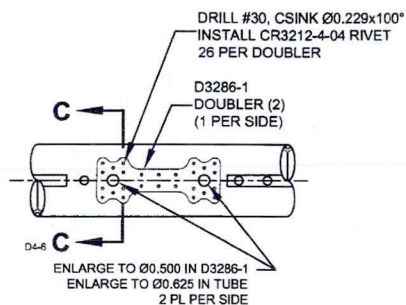



DETAIL B
SCALE 2X

C3-2
C3-3

- TO INSTALL D3286-1/3:
1. GRIND OFF FLANGE IN AREA SHOWN, FLUSH WITH ROUND TUBE
 2. LOCATE & DRILL D3286-1 DOUBLER USING DT3286-1T1
 3. ENLARGE HOLES IN D3286-1 TO Ø0.500
 4. ENLARGE HOLES IN TUBE TO Ø0.625 AND CHAMFER HOLE 0.030x45°
 5. RIVET D3286-1 TO TUBE
 6. INSERT D3286-3 SPACER
 7. WELD IN PLACE.




SECTION C-C
SCALE NONE

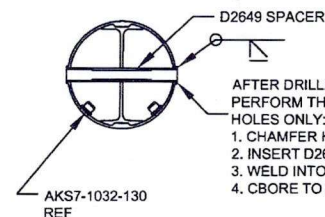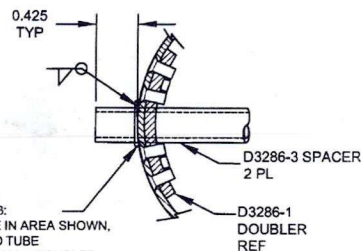

DETAIL D
FOR Ø0.375 HOLES ONLY
SCALE 3X

B4-2
B4-3
B4-4
B4-5

- AFTER DRILLING AND BENDING ASSEMBLY PERFORM THE FOLLOWING FOR Ø0.375 HOLES ONLY:
1. CHAMFER HOLE 0.030 X 45°
 2. INSERT D2649 SPACER
 3. WELD INTO PLACE AND GRIND FLUSH
 4. CBORE TO Ø0.313 X 0.75 DP

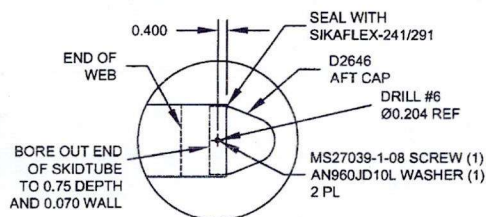


DETAIL E
SCALE 2X

B2-2
B2-3
B1-4
B1-5

ORIENTATION OF
D2680-041



REMOVE RIDGE ON
INSIDE OF SKIDTUBE
LEAVE 0.070 MIN

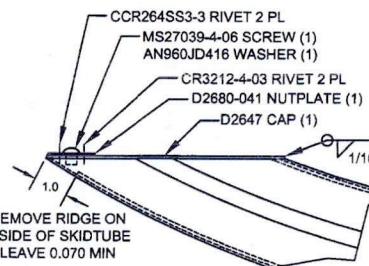

DETAIL F
SCALE NONE

B8-2
B8-3
B8-4
B8-5

- DETAIL F NOTES:**
1. CUT TUBE LEVEL
 2. REMOVE RIDGE ON FWD SIDE
 3. LOCATE D2647 (TRIM AS NECESSARY)
 4. WELD D2647 IN PLACE PER DART QSI 004
 5. GRIND FLUSH
 6. RIVET D2680-041 NUT PLATE IN PLACE

NOTE: MASK THREADS IN D2680-041 PRIOR TO FINISH

RELEASED

DEO ATTACHED

DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 6 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

DRAWING NO. D2650	TITLE 206/407 SKIDTUBE ASSEMBLIES	REV. F	DART AEROSPACE LTD ENGINEERING ORDER		D.E.O. NO. D2650-F-1	SHEET NO. SHEET 1 OF 1	SCALE NTS
DRAWN <i>JP</i>	CHECKED <i>A.P.</i>	MFG. APPR. <i>AA</i>	APPROVED <i>HH</i>		DE APPR. <i>HH</i>		
DATE 12.10.12	DATE 12.10.22	DATE 12.10.22	DATE 12.10.22		DATE 12.10.22		

PURPOSE:

CHANGE C'BORED WELDED CROSSBOLT SPACERS TO SWAGED SPACERS

CHANGE:

PARTS LIST IS AMENDED AS FOLLOWS:

IS:


QTY	QTY	QTY	QTY	PART NUMBER	DESCRIPTION
-1	-3	-5	-7		
1	1	0	0	D2649	CROSS BOLT SPACER
16	17	19	23	D4720-1	SPACER

WAS:

17	18	19	23	D2649	CROSS BOLT SPACER
----	----	----	----	-------	-------------------

ADD DETAIL G BELOW, WHICH IS THE SAME SECTION VIEW AS DETAIL D OF DWG.


C'BORED HOLES ARE **NOW SWAGED** PER DETAIL G BELOW. FOR THE Ø0.375 HOLE THAT IS NOT C'BORED, WELD PER DETAIL D OF DWG (SEE AMENDED DETAIL B FOR REFERENCE).

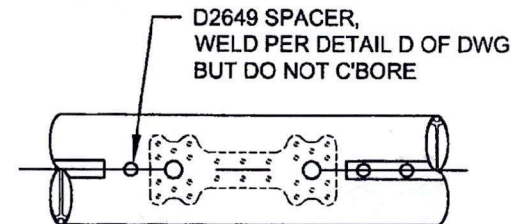

DETAIL B

AMENDMENT TO DETAIL B
NOT TO SCALE

RELEASED
2012-11-16
MP

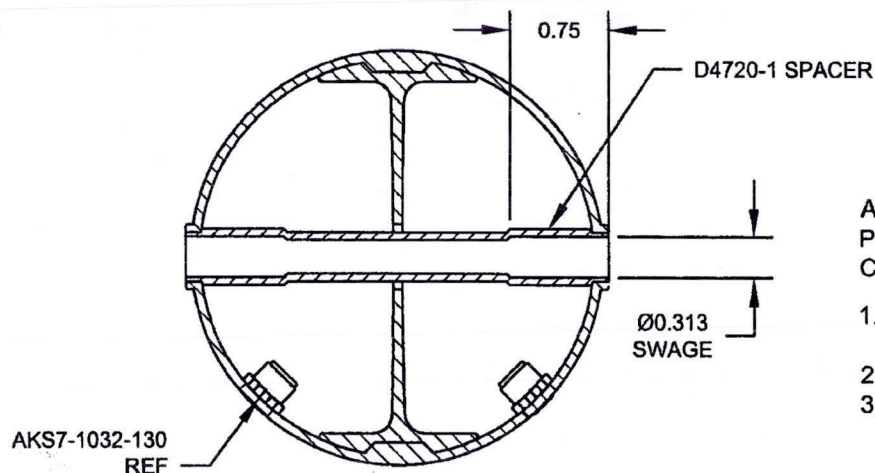

DETAIL G

FOR Ø0.375 HOLES ONLY
FOR HOLES THAT ARE CURRENTLY C'BORED ONLY
NOT TO SCALE

AFTER DRILLING AND BENDING ASSEMBLY
PERFORM THE FOLLOWING FOR Ø0.375 HOLES THAT ARE
CURRENTLY C'BORED:

1. INSERT D4720-1 SPACER, 16 PL (-1) OR 17 PL (-3)
OR 19 PL (-5) OR 23 PL (-7)
2. SWAGE TO Ø0.313 X 0.75 DP PER QSI 002
3. TRIM / GRIND FLUSH PER QSI 002

Entered: _____ Date: _____



WORK ORDER NON-CONFORMANCE / ROUTE UPDATE

NCR No. _____

Route update only ☐

Job: _____ Part No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐	DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Eng. (Non-AW) ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Engineering ☐ Water Jet ☐ Supplier ☐ Quality ☐			
Date :	Sequence #:	QTY Affected :		MRB (QS1042)	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor	
				QC / QA Coordinator	
Root Cause Operator ☐ Manufacturing Process ☐ Equip/Tooling ☐ Handling/Preservation ☐ Material ☐ Product Improvement ☐ Process Improvement ☐ Human Factors ☐		FAULT CATEGORY ☐ Pressure/Forced ☐ Bending ☐ Crushing ☐ Cracks ☐ Crimp/Kink/Ripple/Wave/Twist ☐ Marks/Chatter ☐ Mislabeled ☐ Contamination ☐ Misaligned/off center ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Incomplete/Unclear Instructions ☐ Drill Holes ☐ Fit/Function ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain Direction ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set/Set-up ☐ Positioned Wrong ☐ Outside Tolerance ☐ Drawing ☐ Finish ☐ Part Lost/Missing ☐ Misread			
Other/Details:					

Change Record

PAGE 1 OF 1

Part Number: D206-642-241

Description: REPLACEMENT SKIDTUBE, LH/RH

[illegible]